



- Produced by Aura Design Japan Limited.

Aura

TEL: +81-3-5743-6250 / FAX: +81-3-5743-0057
<http://www.auradesign.co.jp>

- Manufactured & distributed by April Music, Inc.

APRIL
music

TEL: +82-2-3446-5561 / FAX: +82-2-3446-5564
www.aprilmusic.com

Aura
n o t e
Premier

All-In-One Music Center



Contents

Introduction	2
Essential Design Concepts	3
Cautions	4
Unpacking	4
Rear Panel Connections	5
Side Panel Connections	6
Front Panel Operation	7
Operating Instructions	8
Remote Control	8
Clock Setting	10
CD Playback	11
Recording CDs to USB Devices	11
AM/FM Tuner	11
iPod	12
PC connection	12
PC	13
USB Devices	13
Recording to USB	13
Deleting Files from USB Memory	13
Searching for Tracks in USB Memory	14
Searching a USB Directory	14
Digital OPT in	15
AUX 1,2	15
Pre-out	15
Using Aura note Premier with video sources and a flat-panel TV	15
Specifications	16
Warranty	17

Introduction

Aura note Premier (All-In-One Music Center)

Thank you for choosing Aura note Premier, a real high-end music center. Its stylish compact form belies many attributes and capacities, including:

- 1) Top-loading CD player
- 2) AM/FM tuner
- 3) Two auxiliary inputs for external analog devices
- 4) Optical digital input
- 5) Stereo pre-amp output for use with external power amplifier or subwoofer
- 6) Primary USB port for use with portable music players like MP3 players or USB memory devices
- 7) Secondary USB port for use with personal computers (notebook or desktop PC)
- 8) 50 Watts-per-channel MOSFET power output
- 9) iPod connection (cable included)


With expanded input and output options, the Aura note Premier is a significant improvement over the original Aura note. A pair of loudspeakers and cables are all that's needed to enjoy a very satisfying music system with the Aura note Premier. Discrete and elegant, the Aura note Premier is convenient at home as well as for office use. It is capable of impressive sound comparable to any other expensive high end audio systems. You will experience all the qualities you've come to expect from a high end audio product: deep soundstage, tremendous dynamics, delicate details and nuance. The Aura note Premier's single-ended MOSFET output stage is truly state-of-art, fine audio component.

Many people today use their personal computers as their primary music source-search engine, library and player in one. The Aura note Premier is your gateway to enjoying beautiful music with or without the use of earphones, or from your computer speakers. When connected to your PC via USB, the Aura note Premier reveals sonic treasures that would otherwise remain hidden. The Aura note Premier is a complete high end audio music system, built for the 21st Century!

Essential Design Concepts

It is a great pleasure to use the Aura note Premier

UK designer Kenneth Grange has taken great precaution to make the Aura note Premier as simple as possible, while giving this component a timelessly fashionable and stylish look. The Aura note Premier, is a true high end "all-in-one" music center! Its compact form offers many attributes and capacities. The use of a disc stabilizer enhances the sound quality from CDs.

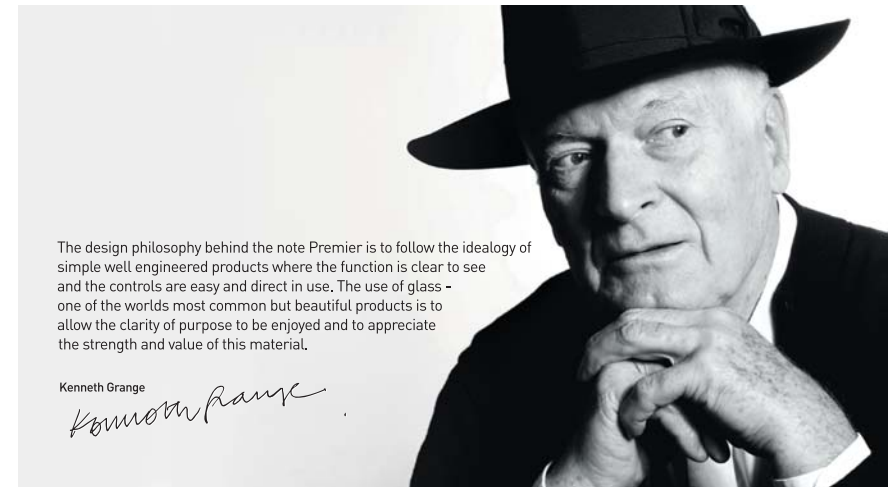

Despite inheriting the best from the past, Aura note Premier is full of cutting-edge technology: Custom-made toroidal power transformer and MOSFET single-ended push-pull output stage with fully discrete amplification circuitry contribute to its fantastic sense of musical detail. The best internal components are found elsewhere in Aura note Premier, also-such as the CS3310 digital volume control IC and the CS4398 digital-to-analog converter. All digital signals passing through the Aura note Premier benefit from these technologies, including MP3 files.

Aura note Premier is the harmonious blend of the tried-and-true with state-of-the-art, for better music everywhere.

Cautions

- 1) Each Aura note Premier is shipped with power supply set to the line voltage of each destination country (100VAC-240VAC) Please check this before plugging your Aura note Premier into the power outlet.
- 2) Aura note Premier is a precision instrument and is sensitive to external vibration. A bit of care taken in placing it in your listening environment will result in much more musical satisfaction.
- 3) The "Standby" button on the front panel is normally used to turn on/off the Aura note Premier. For extended trips away from home, you can disconnect the power cord or turn-off the main power switch on the back panel, but under ordinary circumstances the Standby button is all you need.
- 4) The glass cover for the CD prevents dust from contaminating the mechanism and should be at 'CLOSED' position when CD is playing. When not using the CD changing section, please keep the glass in 'CLOSED' position.
- 5) The CD stabilizer is magnetic. Keep it away from credit and ID cards and other magnetically susceptible items.
- 6) The Aura note Premier is a high-technology device. Don't attempt to open the unit unless you are an authorized Aura note Premier dealer or technician. Opening without factory approval will void the warranty.


Unpacking

Make sure all the following are in the box:

- 1) Aura note Premier All-In-One Music Center
- 2) Remote control
- 3) Glass cover
- 4) CD stabilizer
- 5) USB cable (PC ↔ note Premier USB port on the rear panel)
- 6) Power cable
- 7) iPod connecting cable
- 8) FM radio antenna
- 9) User's manual

If anything is missing, please contact your dealer or email us at info@aprilmusic.com.

Rear Panel Connections

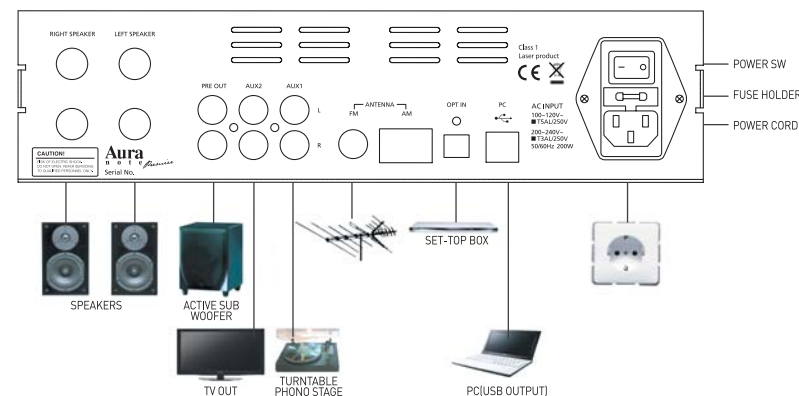

- 1) Speaker: Connect loudspeaker cables (not supplied) to left/right terminals on the back of Aura note Premier. Maintain the proper polarity by keeping Red(+)-to-Red(+) and Black(-)-to-Black(-). Reversing polarity can degrade the sound.
- 2) Aux: These two-channel analog inputs can be used for any stereo device-cassette deck, TV sound monitor out, DVD player, or turntable (When used with appropriate equalizing phono pre-amp).
- 3) Digital OPT in: Some devices are equipped with Optical Digital Output (check with your TV, satellite box, cable-TV box, DVD players, Blu-ray players). You can connect these outs with Aura note Premier Optical input so that you can enjoy the full quality of enhanced sound of Aura note Premier.
- 4) Pre-out: This line-level analog output is after the volume control, for connection to an external power amplifier or powered subwoofer.
- 5) PC: Included USB cable should be used to connect PC and Aura note Premier. When connected, your PC acts as host machine and should recognize Aura note Premier automatically as an external USB audio device. You may need to manually select this in your PC's control panel, under "Sounds and Audio Devices." You may also get the PC to recognize Aura note Premier by doing a "cold boot" by restarting your PC.
- 6) AM/FM Antenna: The quality of FM reception is strongly dependent on antenna quality. Although a simple length of wire will act as an antenna, it may induce noise. Experimenting with antenna type and location will reward you with better sound.
- 7) AC mains: Check that Aura note Premier's power supply matches your local electrical service, then plug in the AC cord. Aura note Premier's clock will read "AM 12:00." Now is a good time to set the clock. (See "Time Setting" in instructions.) To hear music immediately, simply press the Standby button.

Side Panel Connections



1) Headphone: Headphone cable with standard 1/4" plug will fit directly into this jack. Headphones with mini-plugs will need an adaptor (not supplied). Output to the loudspeakers is cut off immediately when headphone is inserted.

2) USB (MP3): This input accepts USB memory devices, MP3 players and the like. Aura note Premier will recognize most of these as external drives and play their content. Songs with MP3/WMA/OGG file formats can be played back.

Devices with large files and/or large numbers of files will require a few minutes to be read by Aura note Premier before play is possible. Wait until the total number of files shows in Aura note Premier's display before playing.

3) iPod : To connect and play your iPod, please use supplied USB+signal cable. Plug both ends into the USB and mini jack port, then select source 'iPod' to play back iPod with your Aura note Premier.



Front Panel Operation



1) Standby: Turns Aura note Premier on and off. When the mains cable is first plugged in, the time will be displayed as "AM 12:00". Pressing the Standby button will let you play music immediately.

WELCOME

2) Volume: Controls the sound output in 100 steps. Zero = no output, while 100 = maximum output. If a subwoofer is connected via the "pre-out" jacks, this output level will go up and down with the level of the main speakers.

VOL 0

VOL 100

3) Play/Pause: Starts and stops the CD player, or a track on a connected USB device.

4) Skip/Search: These buttons let you move forward to the next track or back to a previous one. Hold either one down for more than one second and it acts as a fast-forward or fast-backward key. When a CD is stopped, you can use these keys to find a particular track. Once you've found the track you want, simply press PLAY.

05 0234

5) Tuner: With Aura note Premier in Tuner mode, use the Skip/Search buttons to move up or down the radio dial. Holding the button down for more than one second puts the tuner in Auto Search mode.

05 0234

6) Mode button: Enables selection of source out of 8 choices (CD, TUNER, iPod, PC, USB, OPT, AUX1, AUX2). When the Mode button is pressed, the sources will be displayed for a second. You can press the Mode button continuously to scroll through the inputs. If no action is taken within a second, the displayed mode will be automatically selected. Default mode is CD; in other words, Aura note Premier tries to read the CD first when it is switched on for the first time.

Operating Instructions

Remote Control

Remote Keys: Aura note Premier's remote is a slim credit-card style device, but its 29 keys (or buttons) provide amazingly flexible control over the Aura note Premier. Don't hesitate to play with the remote. You can't damage it or the Aura note Premier. With the remote, you can not only duplicate all the functions of the front panel, but can also do some things possible only with the remote, such as switching from stereo to mono (useful with noisy FM stations) or setting the timer. You will find the Aura note Premier remote control is a powerful tool.



- 1) **STANDBY** (⏻) : To turn on an off the unit. When turned off, the display shows the current time. Very low level of current is flowing when in STANDBY mode, but when you want to save the power, turn the main power switch off which is located on the back of the unit.
- 2) **DIMMER**: You can vary the brightness of the display in five levels (from 'off' to 'very bright') by pressing the "DIMMER" button.
- 3) **REC** (Recording): The remote's "REC" button lets you record from CD or Tuner into the USB memory device (when the memory device is plugged in on the side USB port) while they are playing. Refer to "Recording" instructions.
- 4) **Source Selection** : There are 8 input sources you can select. CD, TUNER, iPod, PC, USB, OPT, AUX1, AUX2 are the inputs. Just press the source button you want to play. As mentioned previously, Aura note Premier looks for a CD when first powered on. If no CD is found, the display will read "No Disc." Thereafter, Aura note Premier will remember your last source and volume setting and return to those when you press "Standby" again.
(*) key is reserved for future use.
- 5) **MUTE**: One press temporarily shuts off sound from Aura note Premier. A second press restores it. In CD playback mode, "▶||" also shuts off the sound by holding the CD playback.

MUTE

- 6) **VOLUME**: The volume up/down buttons control the sound level. Short presses result in volume changes in small steps from 0 to 100. (Default volume setting is 30.) Hold down either UP or DOWN button to make the sound level change continuously.

- 7) **PROG** (MEMO/CLOCK): This button lets you set the clock, tuner presets, and allows programming the play of tracks on a CD.
- 8) **RAND** (Random Play) : This function mixes up the play order of CDs or USB music files. Press the "RAND" button once to turn on random play; press it again to turn it off.
- 9) **SLEEP**: This function makes Aura note Premier turn off at a predetermined time, up to 90 minutes from the time it is set. The first click of "SLEEP" button shows 90 minutes.

SLP 90

Each successive click of the button reduces time to sleep by 10 minutes. The Sleep function is cancelled if you press "STANDBY" to shut down Aura note Premier.

SLP 10

- 10) **TIME** : Normally, it shows the elapsed time of track now playing. When in CD mode, pressing "TIME" will show elapsed/left time of the track and total left time from the CD.
- 11) **TIMER**: This function lets the pre-selected source come on every day at the same time, like an alarm clock.
To set, press "TIMER" then choose "TIMER ON" or "TIMER OFF" by pressing "TIMER" again.

TMR ON

TMR OFF

To select source for TIMER, use source selection button and press "TIMER" again. To set the time, use the ◀ and ▶ buttons to adjust the hour.

AM 06.30

Pressing ◀ or ▶ button more than 2 seconds makes the time display move faster to your destination time. Press "PROG (MEMO/COLOCK)" button to change to minute display, then use the ◀ and ▶ buttons to set minutes. Press "TIMER" again to set the wanted volume using the volume up/down button. Press "TIMER" again to set the automatic system off time from 10 to 240 minutes (use ◀ and ▶ keys to change the value). Pressing "TIMER" again will finish the timer setting.

TMR ON

TMR OFF

If you want to kill the timer function, just press "TIMER" and use ◀ or ▶ key to set it to OFF position.

12) ST/MONO: For FM only. This function can improve the sound of a station at the fringe of your reception area or one suffering from multipath noise (signals bouncing off buildings etc). Often, putting a noisy station in "mono" will reduce the noise and make the sound more enjoyable.

13) REPEAT: This function repeats a track (or tracks) from CD, iPod or USB. Pressing the "REPEAT" button will change from "REPEAT ONE", "REPEAT ALL" and "REPEAT OFF".

RPT ONE RPT ALL RPT OFF

14) A-B (A-B Repeat) : This function is useful if you want to listen repeatedly to an interval of music, for example, if you are trying to learn the chord progression or lyrics to a pop song. Press "A-B Repeat" once to establish your starting point during playback, and press it again to establish your end point.

RPT A- RPT A-B

Playback will continue repeating this section of music until you press "A-B Repeat" a third time to turn this function off.

A-B OFF

15) +10 UP AND -10 DOWN: This function jumps back ten tracks or ahead ten tracks, useful for CD, iPod, USB music files, and MP3s with many selections. You can also use this function to jump to the preset station when in TUNER mode.

Clock Setting

Setting the Clock: When first powered on but in "Standby" mode, Aura note Premier will show "AM 12.00."

AM 12.00

To program the correct time, press the "PROG (MEMO/CLOCK)" button. The hour indicators will blink for five seconds. Use the ◀ and ▶ buttons to adjust the hour. Press "PROG (MEMO/CLOCK)" again to set minutes. After you have set the time, the display will stop blinking after 5 seconds. To reset the clock, put Aura note Premier in Standby and repeat the procedure.

Because Aura note Premier uses top quality separate quartz clock chip, it memorizes the precise time even when the main power goes off.

CD Playback

1) Aura note Premier is a high-performance CD player. Slide the glass cover to the left. The front display will show "OPEN". Place your CD on the spindle and put the stabilizer on top of the CD. And slide the glass cover all the way to the right until it covers the CD thoroughly. When the glass reaches to the limit button at the end, Aura note initializes CD ("READ...") and is ready to play. At this status, by pressing "▶||" button, Aura note will start to play in CD mode. To play CD, top glass should remain "CLOSED".



2) By pressing "CD" button from the source selection with glass cover closed, Aura note Premier will read the disc and the display will show the number of tracks and playing time. Press "▶||" to begin playback. Press the "TIME" button to see remaining time of the current track; press it again to see total remaining time.

3) ◀ or ▶ : The "Skip/Search" buttons on the front panel or on the remote control will take you to the previous track or the next one. Holding either one down for more than two seconds engages the fast search mode. Press the same key ◀ or ▶ to enter normal Play mode. To pause the music, press the "▶||" button once. Press it again to resume play.

Recording CDs to USB Devices

Aura note Premier includes audio processing software to convert CD tracks to MP3s for convenience and portability. On the right side panel is a port for a USB device (memory stick, etc). Plug in your USB memory device and play back the CD track you want to transfer. If you hear a track you want to record, just press "REC". The CD will go back to the first part of that track and begin to record it into the USB device as a 128 kbps MP3 file. If there is no memory device inserted in the port, the display will read "NO USB."

AM/FM Tuner

Aura note Premier includes a high-quality AM/FM tuner. Select "TUNER", then select AM or FM by pushing "TUNER" button again.

TUNER

The display will show band and frequency.



You can program your favorite station using the "PROG (MEMO/CLOCK)" button. Find your first favorite station using the ◀ and ▶ buttons. Then press "PROG(MEMO/CLOCK)" to enter it into position 1. Move to your second favorite station and repeat for position 2. You can save up to 20 stations in Aura note Premier's memory. "+10 UP and -10 DOWN" buttons let you scan programmed stations. ◀ and ▶ buttons change the tuner by 0.1 interval, and if you hold down ◀ and ▶ buttons for more than 2 seconds, it will let you scan for stations automatically.



iPod

Custom-made iPod connection cable is supplied with the package of Aura note Premier. Connect USB part into the USB port and mini jack part into the mini jack port at the same time.

Select source "iPod" from the remote or front panel MODE button.

If there is no iPod connected, "NO IPOD" will be displayed.



If there is an iPod connected correctly, the system will read the iPod and shows the total number of playable songs inside iPod. The function buttons used for CD playback work exactly the same way with iPod.

4 buttons (MENU, ENTER, -10 ◀, and +10 ▶) are used to navigate iPod.

Press "MENU" to see the list and press "+10 ◀" to navigate from Playlists, Artists, Albums, Songs, Genres, and Composers. "-10 ▶" will scroll backwards. Press "ENTER" to go into that menu and choose the song you want to play.

Pressing "MENU" again will bring you back to the upper menu.

The display from the front panel will show information about the song and the elapsed time. If you do not want to see the information except time, press "TIME" to see time only.

PC connection

Aura note Premier can play any music or movie files on your PC. The digital chain within Aura note Premier is a pure high-end audio class and you don't have to buy separate USB DAC or similar products to listen to the quality audio.

Simply connect a USB cable (bundled) between your computer and the back-panel USB port on Aura note Premier. The computer will recognize Aura note Premier as an external USB device. This should happen automatically when the two are connected, but you may need to select Aura note Premier as the external audio device using your PC's control panel.

PC

Use Aura note Premier's Mode button to select "PC" or press "PC" from the remote. Both PC and Aura note Premier have volume controls. You will need to use both for optimum results, with the computer's volume controls typically at maximum.

If you connect your monitor to your screen or TV, you can easily enter into the realm of the real PC-based home theater.

USB Devices

The USB port on Aura note Premier's right side panel lets you plug in stick memory or MP3 players. Once connected, Aura note Premier will read the contents of the USB device. This process can take some time with large collections of music files. Once reading is complete, Aura note Premier will let you play tracks in MP3, WMA, or OGG formats (WAV files are not playable from USB memory devices).

Simply press "Play/pause" to start from Track 1. The function buttons used for CD playback work exactly the same way with USB.

 
Aura note Premier is ideal for use in commercial locations. Make your own library for all-day playback.

Recording to USB

You can save radio programs or CD tracks to USB simply by pressing the "REC" button during play. With radio programs, recording begins at the moment you press "REC". With CD, Aura note Premier will return the track to the beginning to save it completely. Saved audio is encoded as 128kbps MP3 files. Pressing "REC" a second time stops the record process. Saved tracks are given numbers by Aura note Premier, which you can later edit using your PC.

Deleting Files from USB Memory

The "REC" button has a special secondary function, allowing you to delete tracks from USB memory. Simply play the track you want to delete. Press the "REC" briefly and "Delete?" will appear on Aura note Premier's display. Press "REC" again to confirm the deletion. "Deleted" will appear on the display. Aura note Premier automatically recalculates the remaining number of tracks on the USB device.



Searching for Tracks in USB Memory

Aura note Premier lets you search by track number or alphabetically by track or directory name.

Example: To search by number, play any track then press "Search" for three seconds. The display will read "001" with the last digit blinking. Use the ◀ or ▶ buttons to change this digit, for instance, press ▶ four times to change "1" to "5". Then press "Stop" to move to the blinking center digit. Pressing ▶ twice will change it to "3". Press "Stop" again to change the leftmost digit. Press ▶ twice to change "0" to "2". You have now entered track number 235. Press "Start" to play this track.



Example: To search by title, play any track then press "Search" for three seconds. The display will read "001". Again press "Search" to change the display. "A" will be blinking. Use the ◀ or ▶ buttons to change this letter, for instance, press ▶ three times to change "A" to "D". Then press "Stop" to move one place to the right to change the next letter. Pressing ▶ five times will change it to "E". Press "Stop" again to change the character to the right of "E". Continue this process until you have entered as many letters as you wish. Then press "Play" to see track titles. Use ◀ or ▶ to navigate among them, then press "Play" to play the track of your choice.

Example: To find the track entitled "How Deep Is Your Love," enter "HOW" in the display and press "Start." All track names beginning with "How" will be displayed. Scroll to "How Deep Is Your Love" and press "Play".

Searching a USB Directory

Aura note Premier will play all music files in all directories (i.e., however you have organized the files using your PC). Your directories may be named by genre (Jazz, Opera, Rock, etc) or they may be named by performer (Fiona Apple, Beatles, Coldplay, etc). Whatever your directory system, Aura note Premier can shortcut to the one you want this way:

Play any track. Press "MENU(or Search)" for three seconds. The display will read "001". Press "MENU(or Search)" again. "A" will be blinking on the display. Press "Search" again to see the directory that the current music is in. Press ◀ or ▶ to navigate among directories. If "Delete?" appears during directory search, please wait five seconds, then press "MENU(or Search)" again.



*Be careful not to delete those files you do not want to delete!

Digital OPT in

Aura note Premier has a very high quality internal digital-to-analog converter (DAC) that can improve the sound of many digital devices-CD players, or cable and satellite receivers. Simply connect a standard digital optical cable from such a device to the OPT input on the back of Aura note Premier. Some DVD players or Blu-ray players have their own setup menu to set the digital output. Do not forget to set the digital output mode as "PCM" mode.

Aux1, 2

The auxiliary inputs allow you to connect any audio source with two-channel output: cassette deck, DVD player, cable TV receiver, etc. You can also connect a turntable if you have an outboard phono preamp.

Connect the left and right channel outputs to Aura note Premier's "Aux" inputs using RCA cables. Make sure the volume is down before you do so. Some devices, such as cable boxes and digital video recorders, have their own volume controls. The foolproof approach is to set the volume output high on these devices and use Aura note Premier to control the sound level.

Pre-out

Aura note Premier's expanded user options include a preamplifier output. You can connect this to an external power amplifier or to a powered subwoofer. The pre-out is full-range, but the subwoofer's input filter will block all but the lowest frequencies. This will not affect the sound you hear from your main speakers.

Using Aura note Premier with video sources and a flat-panel TV

Many people may wish to use Aura note Premier with a flat-panel TV. Aura note Premier does not provide video switching, but can still work wonderfully as the heart of a combined audio/video system. Typically, the flat-panel TV would be placed between a pair of loudspeakers, with Aura note Premier below it. Most such systems would also include two video sources-say, a Blu-ray/DVD player and a cable/satellite receiver or digital video recorder such as TiVo.

All Blu-ray/DVD players and cable/satellite receivers have stereo analog audio outputs. These should be connected to Aura note Premier's "Aux 1" and "Aux 2" inputs. The corresponding video connection on the flat-panel will be "HDMI 1" and "HDMI 2" or "Component 1" and "Component 2." Thus, when you select "HDMI 1" or "Component 1" on the TV, you should also select "AUX1" on Aura note Premier. This insures that the sound matches the picture.

It is also possible to connect a video source to Aura note Premier via the digital OPT input, but Aura note Premier does not decode surround sound formats. It is therefore best to use the stereo analog audio connection, as Aura note Premier is optimized for superb stereo performance. With Aura note Premier, a flat-panel TV, and good video sources, you will have full enjoyment of movies, sporting events, and TV shows of all kinds.

Specifications

■PREAMPLIFIER & POWER AMPLIFIER

INPUT : AUX(RCA) x 2, USB-A x 1(for iPod, MP3 Player, or USB memory(MP3, WMA, OGG files)), USB-B x 1(for PC), Optical x 1

OUTPUT : 1 Pair of speaker, Headphone, Preamplifier output

VOLUME : CIRRUS LOGIC CS3310

FREQUENCY RESPONSE : 20 Hz - 25 kHz(-0.5 dB)

OUTPUT : 50W + 50W

POWER AMP : HITACHI J162/K1058 MOSFET SINGLE- ENDED PUSH-PULL

■CD/DAC

TOP-LOADING CD MECHANISM

MEDIA : CD / MP3 CD / USB Memory / iPod

D/A CONVERSION : CIRRUS LOGIC CS4398

DIGITAL FILTER : PROPRIETARY 3rd ORDER FILTER

DIGITAL BUFFER : 32 MB SRAM

■TUNER

BAND : FM (87.5 MHz - 108.0 MHz) / AM (522 - 1602 kHz) *(varies on countries)

PRESET: 20 STATIONS

■USB

USB B : TI PCM2704 USB DAC

USB A :

PLAYBACK FORMAT : MP3 / WMA / OGG(UP TO 320 kbps)

RECORDING FORMAT : MP3 128 kbps (FIXED)

SAMPLE RATE : 32 - 48 kHz / 16 bit

■DIMENSIONS

SIZE : W278 x H84 x D278 mm (W10.94 x H3.3 x D10.94 inch)

WEIGHT : 7kg (15.4lb. Net)

POWER CONSUMPTION : 11W (STANDBY), 30W (NOMINAL), 200W (MAXIMUM)

*1 Rights reserved (DRM) files are not guaranteed for Playback.

*2 Available on Window OS / Mac OS

*3 Maximum input level is 2.8 Vrms.

* Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases shall be placed on the apparatus.

* The socket-outlet shall be installed near the equipment and shall be easily accessible.

* An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.

* All specifications are subject to change without further notice

Warranty

The warranty service is valid only when purchased from an authorized dealer. A valid proof of purchase must be supplied for all warranty services. Any unauthorized work, modification or service rendered on the player will void the warranty.

Warranty Period	2 years
Date of Purchase	
Authorized Aura Product Dealer	
Telephone	
Serial No.	
Authorized Service center	

*Unauthorized person should not try to modify the products!

